

Day 1 Quick Reference Index

Background Image Selection Utility (Gradedwork 4D)	38, 122, 218, 395
Staged Design Option	40, 165, 170, 177, 199, 210, 222, 223
Shader Support (AGTEK 4D) and Other Start-Up Options Menu Settings	40, 97
Status Bar Display Options in Entry Mode (Ctrl-Q / Q)	47, 82, 93, 159, 262, 359
Table of Inch/Feet Equivalents	55, 172, 408
Table of Slope Equivalents	55, 214, 408
Length/Area Utility	62, 220-221, 245-246, 294
Geo-Reference Job File with Google Earth (AGTEK 4D)	69-76, 305
F7 - Move Selected Point to Arrow Pointer Location	74, 134, 257, 386
Documentation Layer (AGTEK 4D)	77, 136
Existing Perimeter Entry Examples	78-79, 225, 364, 366, 389
Display Pointer Snap Radius (Draw Snap Circle)	80, 124
Contour Streaming Entry	81
Compress Selected Utility (Point Reduction)	81, 91, 350, 363
Continue Last Entry Option (Right-Click Menu)	82, 133
Error Checking and Correcting Existing/Stripped Surfaces	87-113, 177, 213
Delete Segments from Data Line (Remove Selected Function)	90
Drag-Select/Range-Select Scroll Points for Edits and Offsets	90, 142, 151, 354, 367, 368, 378
File Information Report (Site Min/Max Elevations)	93
Raise/Lower Elevation Function	94, 397
Contour Surface Utility	99, 166, 168, 401
Assign Elevations by Daylight	109-110, 157, 163, 363
Convert Daylights Utility (AGTEK 4D)	110, 363
F7 - Extend/Shorten Selected Start/End Line Segment to Arrow Pointer Location	112, 257, 370
Error Checking and Correcting Design/Subgrade Surfaces	134-136, 139, 161, 164-170, 199, 213
Offset Line Utility	137-151, 328-329, 332, 338-340, 347-348, 354-355, 361, 371, 385, 388-389
Move Start (Diamond) Point of Closed Object (Ctrl-M)	142
Swap Ends Utility	148, 152, 205, 256, 338, 348, 352, 380

Day 1 Quick Reference Index (Cont.)

Apply Template Utility (AGTEK 4D)	152-155, 380-381, 383-384
Assign Elevations by Slope	157, 368
Design Perimeter Entry Examples	162-163, 225, 364-365, 389
Stripping Area Entry, Verification and Editing	171, 172-177, 213, 390
Wildcard Label Selection	197, 256, 358
Report Region/Sectional Area Entry, Verification and Editing	171, 178-199, 213, 366, 391-393
On-Grade Limit Utility	177, 199, 210, 226, 229
Using Profile Views	203-208, 300-301, 356, 363, 396
Conform Profile Utility	206
Station Generator Utility	208, 356
Capture Cut-Fill Map Colors for Background Image Display (Alt-K in Gradework 4D)	211, 218, 395
Display Region Hatching on Cut-Fill Maps	213
Slope Boundaries Utility (Gradework 4D)	219
Volume Calculation Error and Warning Dialogs	225
Volume Report Interpretation and Applications	227-230, 237-238, 366, 394, 396-398, 400
Export TXT or XLSX Volume Report for Excel	241, 244
Cumulative Object Selection	245, 335, 348, 352, 353
Join (Bridge Gap) Utility (Ctrl-J)	256
Insert Break Point Function (F5)	257, 334, 350, 352, 372, 377
Trim Lines Utility (Ctrl-T)	256, 351-353, 358
Fillet Line Utility (Ctrl-F)	256, 375-379, 383
F7 - Snap Move Selected Point to Point/Segment at Arrow Pointer Location (Gradework 4D)	257, 386
Print/Plot Setup, Options and Formatting (Print Page/Print View Mode)	293-307
Circle Utility	349, 362
Cut/Paste Surface Layer Data (AGTEK 4D)	357
Assign Elevations by Auto Pad Utility	360-361
Shrink-Wrap Utility (Gradework 4D)	365
Assign Elevations by Conform Selected Utility	370, 372