

Day 2 Quick Reference Index

Background Image Selection Utility (Gradework 4D)	32, 77, 405
Staged Design Option	34, 283, 287, 290, 297-299, 301-302
Tables of Inch/Feet Equivalents and Slope Equivalents	53, 424
Area Selection	60, 72, 82, 91, 150, 209, 339, 367
Coordinate Translations	63, 74, 134-135, 147-148 (Scale Repair), 209-211, 331-340, 343-344
Import Mode Layer Display/Filtering Dialog (Alt-B)	72, 86, 90, 97, 149, 254
Trim Lines Utility (Ctrl-T)	73, 119-120, 157, 191, 243, 361-363, 368, 373, 382
Crop Rectangle Utility	82, 85 (Import), 89 (Import), 176, 206 (Import), 338 (Import)
Rotated CAD Text Display Option (AGTEK 4D)	84, 90, 100
File Information Report (Zero Internal North/East Values, Site Min/Max Elevations)	85, 101
Join (Bridge Gap) Utility (Ctrl-J)	89 (Import), 105, 115, 127, 152, 177, 256
Compress Selected Utility (Point Compression)	89 (Import), 108, 115, 116, 127, 151, 156, 177, 360, 373
Cut/Paste Function (AGTEK 4D)	92, 100, 241, 367
Status Bar Display Options in Entry Mode (Ctrl-Q / Q)	101, 262, 369
Find Elevation Function	101, 103
Cumulative Label Selection	105, 161-162, 190
Assign Elevations by Conform Selected Utility	109, 131, 176-182, 193, 242, 380, 382
Range-Select Scroll Points with Shift Key	114, 172, 201, 364
Drag-Select Scroll Points	114, 124, 131, 132, 160, 171, 183, 184, 201, 377, 378, 388
Assign Elevations by Auto Pad Utility	116-118, 149-173, 370-371
Wildcard Label Selection (Ctrl-L)	117, 179, 368
Offset Line Utility	119, 124, 153-154, 158-160, 182-184, 187-188, 357-358, 364-365, 371, 381, 395, 398-399
Display Snap Radius at Pointer (Draw Snap Circle)	122, 262
Move Start (Diamond) Point of Closed Object (Ctrl-M)	124
Documentation Layer (AGTEK 4D)	126, 284
Fillet Line Utility (Ctrl-F)	127, 256, 385-389, 393
F7 - Snap Move Selected Point to Point/Segment at Arrow Pointer Location (Gradework 4D)	127, 180, 257, 396
Continue Entry Function (Right-Click Menu)	128, 142

Day 2 Quick Reference Index (Cont.)

Swap Ends Utility	130, 131, 153, 177, 256, 358, 390
F7 - Extend/Shorten Selected Start/End Line Segment to Arrow Pointer Location	131, 172, 257, 183, 380
Assign Elevations by Daylight	132, 373, 399
Assign Elevations by Slope Edit Function	132, 378
Geo-Reference the Job File (AGTEK 4D)	136-138, 349-354
Insert Break Point Function (F5)	141, 183, 185, 256, 360, 362, 382, 387
State Plane Lookup Utility (Gradework 4D)	140
Length/Area Utility	152
F7 - Move Selected Point to Arrow Pointer Location	180, 183, 257, 354, 396
Contour Surface Utility	193, 203, 215, 225, 245, 288, 345-347, 411
Design Perimeter Entry Examples	202, 213, 374, 375, 399
Existing Perimeter Entry Examples	203, 214, 239, 344, 374, 376, 399
Volume Report Interpretation and Applications	204, 216, 230-234, 376, 404, 406-408, 410
Using Profile Views	217, 229, 240, 366, 373, 406
Station Generator Utility	217, 240, 366
Apply Survey Utility	221
Manage Surfaces Utility (AGTEK 4D)	229
Shrink-Wrap Utility (Gradework 4D)	236, 375
Display Modeling Colors Option (Gradework 4D)	285
Manage Export Colors (AGTEK 4D)	285-286
Output by Line Label Export Option	286, 287, 297, 299, 303
Convert Daylights Utility (AGTEK 4D)	373
Report Region/Sectional Area Entry	376, 401-403
Assign Elevations by +/- Edit Function	378
Apply Template Utility (AGTEK 4D)	390-391, 393-394
Stripping Area Entry	400
Capture Cut-Fill Map Colors for Background Image Display (Alt-K in Gradework 4D)	405
Volume Calculation Error and Warning Dialogs	417